


Using the Magnet to Set the Timer & Operate or Test the Modular "Seconds On" Timer


NOTE: Ignition/Power must be on and small LED flashing 1 sec on, 1 sec off - indicating power to pump and that it's a "Seconds On" Timer. If LED does NOT flash, confirm power and polarity are correct.




Single Test Cycle - place magnet on Lubecore logo. When bottom horizontal bar lights up, remove magnet to initiate single cycle. Pump will run for programmed period of "Seconds On Time".

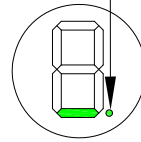


Continuous Cycle - place magnet on Lubecore logo. When bottom 2 horizontal bars light up, remove magnet to initiate continuous running of pump. Turn off power or put magnet back to stop pump.

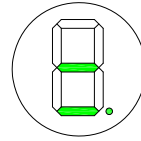

"On" Time Programming - place magnet on Lubecore logo. Remove when all 3 horizontal bars light up. You can now program "ON" times. Quickly replace and remove magnet till chosen parameter is shown - 1 through 5.

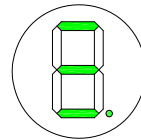

"Off" Time Programming - place magnet on Lubecore logo. Remove when top 4 bars light up. You can now program "OFF" times. Quickly replace and remove magnet till chosen parameter is shown - 1 through 5.

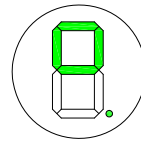

T2 - "On Time" - 'Seconds'

8	12	16	20	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

T1 - "Off Time" - 'Minutes'

30	60	120	240	480
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>



lubecore™

Automated Lubrication System - Operator Card

CHECK FOR EVIDENCE OF FRESH GREASE AT THE GREASE POINT

- Check grease level - make sure it is above minimum level
- Check all grease points for evidence of fresh grease
- All points should look like you just greased it by hand (grease should look shiny)
- Inspect for damaged or worn grease lines and fittings
- Check for LED flashing when ignition is on

