

## Information Bulletin Trailer Timer – ABS Power Connection

For all customers who have the Lubecore Trailer Timer(s):

12.003 - Timer - Trailer 12V - Std Software & 12.012 - Timer - Trailer 24V - Std Software

If you have either of the above timers mounted on units in your fleet, connected to your ABS system, please check polarity as described below. It has come to our attention that some of the harnesses used with these have the wires reversed in the plugs. The timers are assembled to have power on pin #1 of amp connector, and ground on pin #2. However, some of the harnesses have the wires reversed.

When the timer is connected properly, the board pin #1 is grounded, and the board pin #2 should have constant power. See picture below.

